



Unauthorised reproduction is prohibited

Copyright © iCOM 2017  
T: 0845 094 0707

## POKER VIBRATOR - (Petrol)

### SAFETY PRECAUTIONS & WARNINGS

It is in the interests of those operating this equipment, and for the safety of others, that these **SAFETY PRECAUTIONS & WARNINGS** are carefully read and understood before operating this equipment.

### PURPOSE

1. This equipment is designed for immersion in wet concrete and used to remove pockets of air and assist the release of trapped water.

### PERSONAL SAFETY

2. This equipment is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it. It must not be operated by minors, or by anyone under the influence of drugs or alcohol.
3. If the equipment is not used in a safe, careful and controlled way, personal injury or injury to others may result.
4. Take the necessary precautions when handling cement, as it may be harmful to the eyes and lungs. Continued cement contact with the skin may cause dermatitis, therefore wash hands thoroughly after contact with cement.
5. Vibration from this equipment may be at a level that could be hazardous to the user, if operated for extended periods. Always wear gloves and ensure hands are warm before starting work and they remain warm and dry. Do not grasp the equipment too tightly, only sufficient to safely control the machine. If you experience tingling, numbness or loss of strength in the fingers – stop working immediately. Take frequent breaks and exercise the hands and arms to minimise risks.
6. This equipment employs the use of petrol, which can cause fire and explosion if not handled in a safe manner.
7. Before attempting to operate this equipment you must familiarise yourself with the equipment, its controls and operating characteristics.
8. Before starting your work, think and plan ahead to ensure you, and others around you, will be working in a safe environment.
9. When using this equipment, it is recommended that the following items of Personal Protective Equipment (PPE) be worn:
  - Ear defenders giving protection for levels up to 98dB(A).
  - Safety waterproof boots to EN345 or BS1870/4972.
  - Impact resistant goggles to EN166-B or BS2092 protection.
  - Appropriate industrial gloves.

**NOTE:** Other types of work, or environment, may require a higher level of PPE.

### OPERATING AREA SAFETY

**WARNING:** If used indoors or in confined spaces this equipment could cause fatal carbon monoxide poisoning. Never use it in domestic premises and if used in other indoor situations you must ensure you first assess its suitability and the ventilation required for safe use. Mechanical extraction ventilation will be required in almost every case.

10. Before commencing work, ensure that the area you are to operate the equipment in is a safe environment. Erect safety barriers and warning signs as necessary.
11. Make sure that the work area is clear of obstructions and hazards (projections, cables, pipes, etc.).
12. Never run the equipment inside buildings, or in poorly ventilated locations, where they may be risk of serious or fatal injury from inhaling exhaust (toxic) fumes. **See warning above.**
13. Before commencing work, warn others who may be working in the vicinity of the equipment, to keep clear. If possible place safety barriers around your work area.
14. Protect others from noise and wet cement.
15. Anybody who is working near to you will also need to wear the appropriate PPE.
16. Do not use this equipment where there is a danger of igniting fumes from petrol, or gas cylinders.

### BEFORE OPERATING THE EQUIPMENT

#### SAFETY CHECKS

17. Visually inspect the equipment and all its accessories (drive unit, flexible drive and couplings, vibrating head, safety barriers, etc.) for serviceability (completeness, signs of damage, undue wear, etc.). Do not use the equipment if found damaged or worn - contact the hire company immediately.
18. Before attempting to operate the equipment, familiarise yourself with the equipments controls. Make sure you understand their purpose and function.
19. Stop the equipment before attempting to make any adjustments.
20. Before you start the equipment, you must know how to **STOP** it in an emergency.

### OPERATING THE EQUIPMENT

#### USING THE EQUIPMENT

21. In cold weather, allow the equipment to 'warm-up' before attempting to use it.
22. Position the equipment to ensure all the concrete areas you are to work on are easily accessible.
23. Should the vibrating head not vibrate, gently tap the nose on a hard surface.
24. Do not attempt to bend the flexible drive round sharp bends.
25. Never attempt to disengage the flexible head whilst the equipment is running.
26. When the flexible drive is disengaged, keep the open end clean.

CONTINUED ON OVERLEAF >>>

27. Do not allow the head of the poker to vibrate on hard surfaces.
28. Do not touch the any part of the poker when it is vibrating.
29. Always insert and withdraw the poker from the concrete in slow and steady motion.

## **STARTING & STOPPING THE EQUIPMENT**

**Note: Below is a brief description of STARTING procedure for the majority of poker vibrators. If the hire company has provided dedicated instructions for your type of machine – follows them.**

30. Check the fuel and oil levels and top-up as necessary.
31. Turn the on/off switch to the '**ON**' position and '**CLOSE**' the choke lever.
32. Turn the fuel tap to the '**ON**' position.
33. Hold on to the equipment with one hand and with the other, take-up the slack of the starter handle cord until you feel the starter has engaged with the engine. Now pull firmly on the starting handle. Once the engine has started, allow the starter cord to retract.
34. Once the engine has started and warmed-up, adjust the throttle until the engine idles and '**OPEN**' the choke.
35. To stop the engine, '**CLOSE**' the throttle lever, turn the fuel tap '**OFF**' and move the on/off switch to the '**OFF**' position.
36. Stop working and switch-off the machine if someone approaches you.

## **REFUELLING**

37. Refuel with petrol only.
38. The engine must not be running whilst refuelling. Warm engines must be allowed to cool down first.
39. Do not smoke whilst refuelling.
40. Clean the area around the fuel filler cap, then, remove it.
41. Using a clean funnel, pour petrol into the fuel tank. Care must be taken not to overfill or spill. Fuel spilt on the engine must be wiped dry, that spilt on the ground must be removed and the area covered with sand or earth. Fuel soaked clothes must be removed.
42. Replace the fuel filler cap securely.

## **SECURITY AND MAINTENANCE**

43. Visually check the condition of the equipment at the start of each day.
44. If the equipment operates erratically, or incorrectly, do not use and do not attempt to repair it. Inform the hire company.
45. Immediately you have finished using the poker, wash it down with clean water to remove all traces of cement.
46. Periodically clean the equipment to ensure it is free from dust dirt and other debris.
47. When the equipment is left unattended for long periods (i.e. overnight), ensure it is made secure to prevent unauthorised use or loss.

## **COLLECTION & PICK-UP**

48. For safety reasons this equipment requires you to use a **VAN** or an **ESTATE**.

